 **TheGreenBow IPSec VPN Client**  
**Configuration Guide**  
**Linksys RV042**

WebSite: <http://www.thegreenbow.com>

Contact: [support@thegreenbow.com](mailto:support@thegreenbow.com)


# 1 Introduction

## 1.1 Goal of this document

This configuration guide describes how to configure TheGreenBow IPsec VPN Client with a Linksys RV042 VPN router.

## 1.2 VPN Network topology

In our VPN network example (diagram hereafter), we will connect TheGreenBow IPsec VPN Client to the LAN behind the Linksys RV042. The VPN client is connected to the Internet with a DSL connection or through a LAN. All the addresses in this document are given for example purpose.

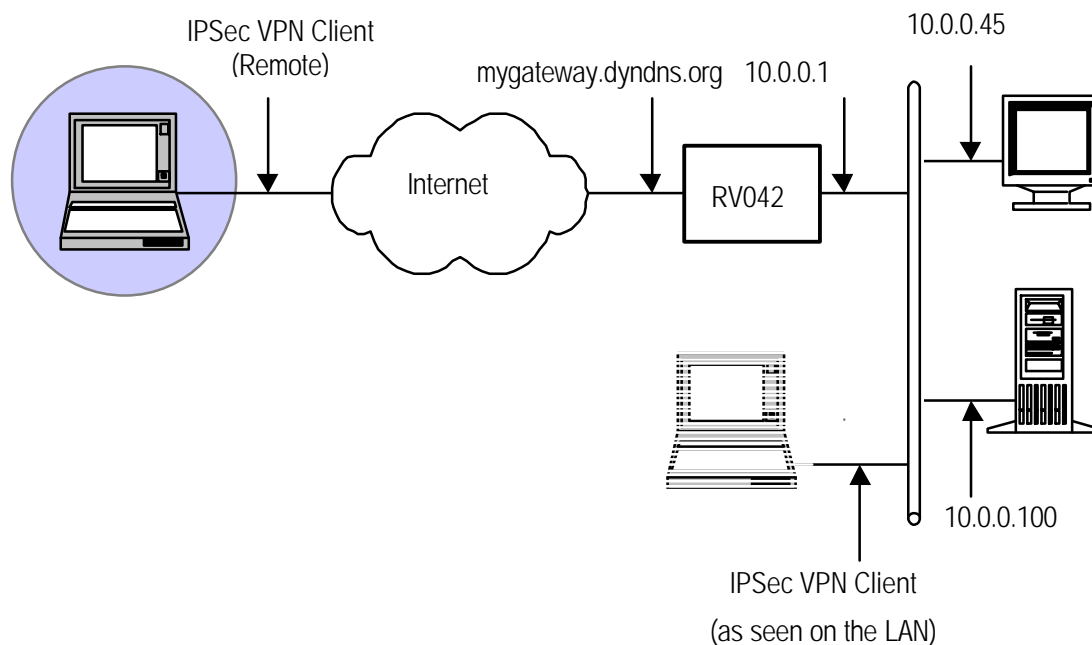

## 1.3 RV042 VPN Gateway

Our tests and VPN configuration have been conducted with RV042 firmware release version 1.3.6.4.

## 2 RV042 VPN configuration

This section describes how to build an IPSec VPN configuration with your RV042 router.

Once connected to your gateway, you must select “VPN” tab.

Summary | Gateway to Gateway | Client to Gateway | **VPN Client Access** | VPN Pass Through

3 Tunnel(s) Used | 27 Tunnel(s) Available | Detail


Add New Tunnel

Jump to 1 / 1 page | 10 entries per page

No.	Name	Status	Phase2 Enc/Auth/Grp	Local Group	Remote Group	Remote Gateway	Tunnel Test	Config.
1		Connected	DES/MD5/1	10.0.0.0 255.255.255.0	10.24.233.0 255.255.255.0	1	Disconnect	Edit
2		Connected	DES/MD5/1	10.0.0.0 255.255.255.0	10.24.234.0 255.255.255.0	7	Disconnect	Edit
3		Connected	DES/MD5/1	10.0.0.0 255.255.255.0	10.24.232.0 255.255.255.0	2	Disconnect	Edit
4		Waiting for Connection	DES/MD5/1	10.0.0.0 255.255.255.0	192.168.230.0 255.255.255.0	7	Connect	Edit
5		Waiting for Connection	DES/MD5/2	10.0.0.0 255.255.255.0	192.168.0.0 255.255.255.0	6	Connect	Edit

5 Tunnel(s) Enabled | 5 Tunnel(s) Defined

Then click on “Add New Tunnel”.

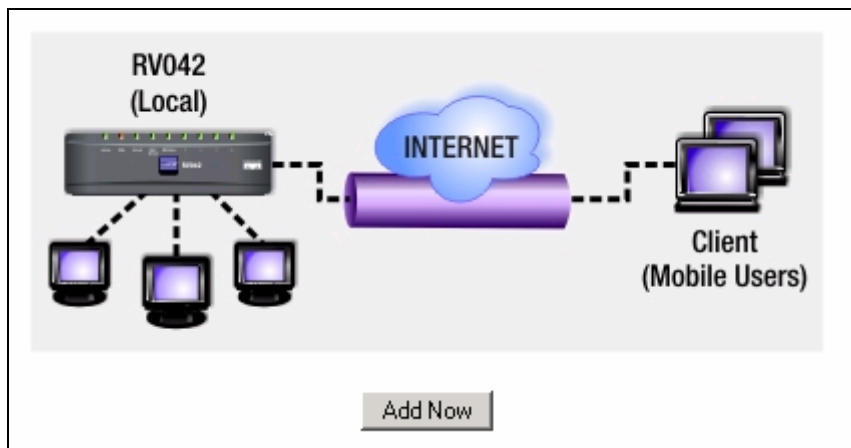

You have to choose “Client to Gateway” mode. Click on “Add Now”.

Tunnel
  Group VPN

Group No.

Group Name

Interface

Enable

You must select “Group VPN”. Only one Group VPN can be used at the same time.

Local Security Group Type

IP address  .  .  .

Subnet Mask  .  .  .

In "Local Group Setup", you have to set the subnet IP address of your gateway. If you have configured another IP subnet class, you have to set it here.

Remote Client

E-mail address  @

In "Remote client setup", you can set phase 1 ID of the client. In our example, we used an email.

Keying Mode: IKE with Preshared key

Phase1 DH Group

Phase1 Encryption

Phase1 Authentication

Phase1 SA Life Time

Perfect Forward Secrecy

Phase2 DH Group

Phase2 Encryption

Phase2 Authentication

Phase2 SA Life Time

Preshared Key


In "Ipsec Setup", you set algorithms used for the connection.

Click on "Save settings" for keeping your configuration. A new item is then added in "Group VPN status".

Group Name	Connected Tunnels	Phase2 Enc/Auth/Grp	Local Group	Remote Client	Remote Client Status	Tunnel Test	Config.
TheGreenBow	1	AES/SHA1/2	10.0.0.0 255.255.255.0	support@thegr...	<a href="#">Detail List</a>	<input type="button" value="Disconnect"/>	<a href="#">Edit</a>

### 3 TheGreenBow IPsec VPN Client configuration

#### 3.1 VPN Client Phase 1 (IKE) Configuration

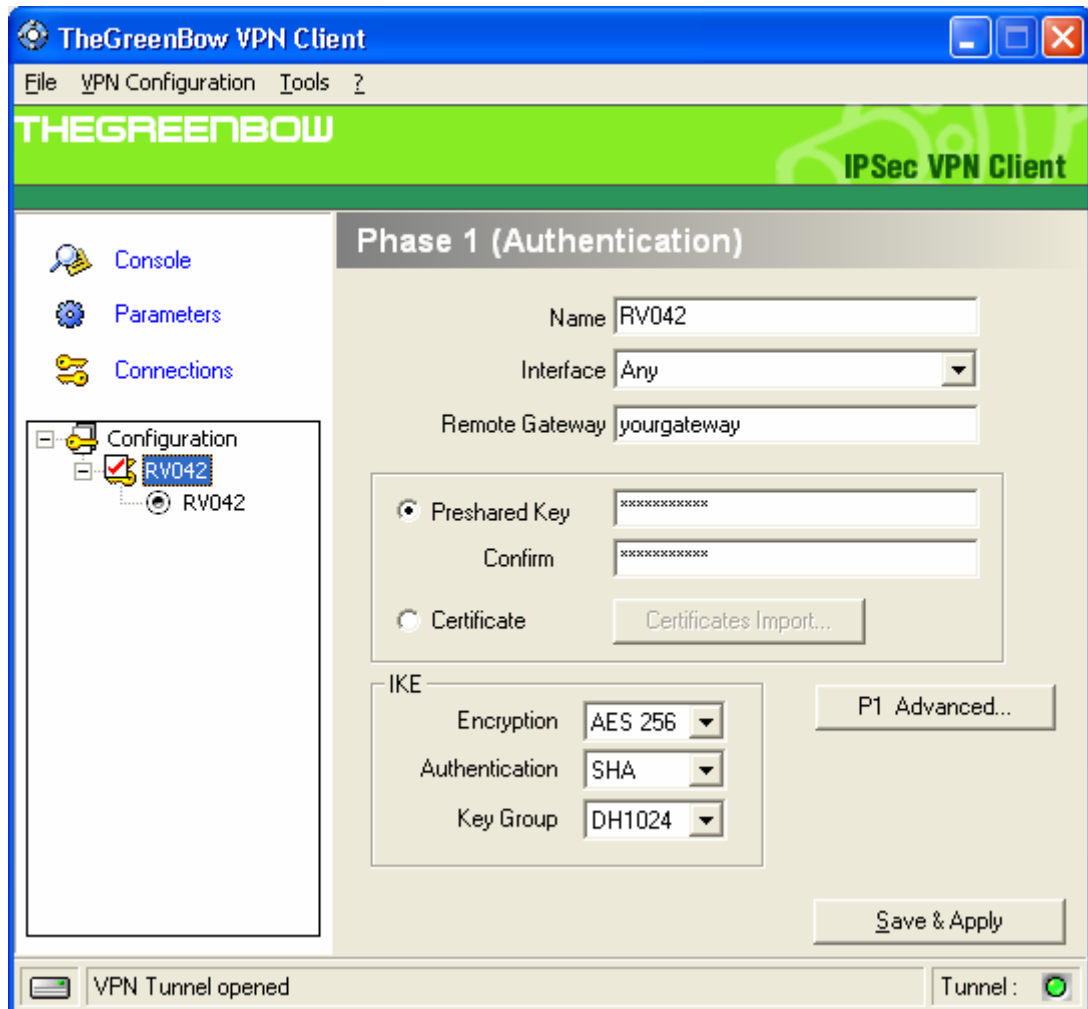


#### Phase 1 configuration

You have to set in "Remote Gateway" the IP address or DNS address of the remote gateway.

Click on "P1 Advanced".

Select "Aggressive Mode" and fill in "Local ID" ID of the client.

### 3.2 VPN Client Phase 2 (IPSec) Configuration

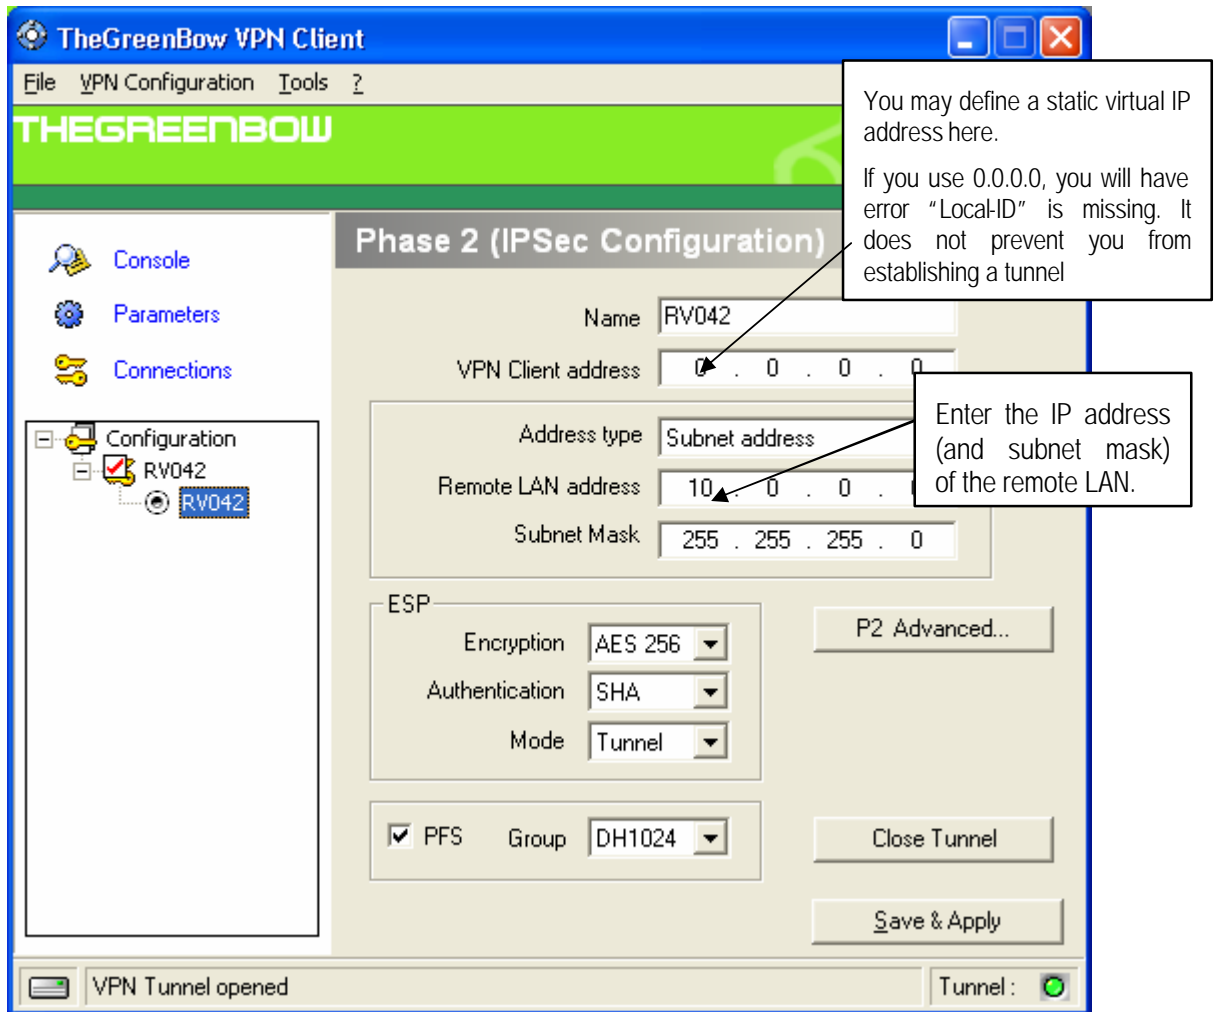

Phase 2 Configuration

### 3.3 Open IPSec VPN tunnels

Once both Linksys RV042 router and TheGreenBow IPSec VPN Client have been configured accordingly, you are ready to open VPN tunnels. First make sure you enable your firewall with IPSec traffic.

1. Click on "**Save & Apply**" to take into account all modifications we've made on your VPN Client configuration
2. Click on "**Open Tunnel**", or generate traffic that will automatically open a secure IPSec VPN Tunnel (e.g. ping, IE browser)
3. Select "**Connections**" to see opened VPN Tunnels
4. Select "**Console**" if you want to access to the IPSec VPN logs and adjust filters to display less IPSec messaging.

<b>THEGREENBOW</b> 0111101	Doc.Ref	tgvpn_ug_RV042_en
	Doc.version	1.0 – Jan. 2006
	VPN version	3.0x

## 4 Tools in case of trouble

Configuring an IPSec VPN tunnel can be a hard task. One missing parameter can prevent a VPN connection from being established. Some tools are available to find source of troubles during a VPN establishment.

### 4.1 A good network analyser: ethereal

Ethereal is a free software that can be used for packet and traffic analysis. It shows IP or TCP packets received on a network card. This tools is available on website <http://www.ethereal.com/>. It can be used to follow protocol exchange between two devices. For installation and use details, read its specific documentation.



## 5 VPN IPSec Troubleshooting

### 5.1 « PAYLOAD MALFORMED » error (wrong Phase 1 [SA])

---

```
114920 Default (SA RV042-P1) SEND phase 1 Main Mode [SA][VID]
114920 Default (SA RV042-P1) RECV phase 1 Main Mode [NOTIFY]
114920 Default exchange_run: exchange_validate failed
114920 Default dropped message from 195.100.205.114 port 500 due to notification
type PAYLOAD_MALFORMED
114920 Default SEND Informational [NOTIFY] with PAYLOAD_MALFORMED error
```

---

If you have an « PAYLOAD MALFORMED » error you might have a wrong Phase 1 [SA], check if the encryption algorithms are the same on each side of the VPN tunnel.

### 5.2 « INVALID COOKIE » error

---

```
115933 Default message_recv: invalid cookie(s) 5918ca0c2634288f 7364e3e486e49105
115933 Default dropped message from 195.100.205.114 port 500 due to notification
type INVALID_COOKIE
115933 Default SEND Informational [NOTIFY] with INVALID_COOKIE error
```

---

If you have an « INVALID COOKIE » error, it means that one of the endpoint is using a SA that is no more in use. Reset the VPN connection on each side.

### 5.3 « no keystate » error

---

```
115315 Default (SA RV042-P1) SEND phase 1 Main Mode [SA][VID]
115317 Default (SA RV042-P1) RECV phase 1 Main Mode [SA][VID]
115317 Default (SA RV042-P1) SEND phase 1 Main Mode [KEY][NONCE]
115319 Default (SA RV042-P1) RECV phase 1 Main Mode [KEY][NONCE]
115319 Default (SA RV042-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
115319 Default ipsec_get_keystate: no keystate in ISAKMP SA 00B57C50
```

---

Check if the preshared key is correct or if the local ID is correct (see « Advanced » button). You should have more information in the remote endpoint logs.

### 5.4 « received remote ID other than expected » error

---

```
120348 Default (SA RV042-P1) SEND phase 1 Main Mode [SA][VID]
120349 Default (SA RV042-P1) RECV phase 1 Main Mode [SA][VID]
120349 Default (SA RV042-P1) SEND phase 1 Main Mode [KEY][NONCE]
120351 Default (SA RV042-P1) RECV phase 1 Main Mode [KEY][NONCE]
120351 Default (SA RV042-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
120351 Default (SA RV042-P1) RECV phase 1 Main Mode [ID][HASH][NOTIFY]
120351 Default ike_phase_1_recv_ID: received remote ID other than expected
support@thegreenbow.fr
```

---

The « Remote ID » value (see « Advanced » Button) does not match what the remote endpoint is expected.

## 5.5 « NO PROPOSAL CHOSEN » error

```

115911 Default (SA RV042-P1) SEND phase 1 Main Mode [SA][VID]
115913 Default (SA RV042-P1) RECV phase 1 Main Mode [SA][VID]
115913 Default (SA RV042-P1) SEND phase 1 Main Mode [KEY][NONCE]
115915 Default (SA RV042-P1) RECV phase 1 Main Mode [KEY][NONCE]
115915 Default (SA RV042-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
115915 Default (SA RV042-P1) RECV phase 1 Main Mode [ID][HASH][NOTIFY]
115915 Default phase 1 done: initiator id c364cd70: 195.100.205.112, responder id
c364cd72: 195.100.205.114, src: 195.100.205.112 dst: 195.100.205.114
115915 Default (SA RV042-RV042-P2) SEND phase 2 Quick Mode
[SA][KEY][ID][HASH][NONCE]
115915 Default RECV Informational [HASH][NOTIFY] with NO_PROPOSAL_CHOSEN error
115915 Default RECV Informational [HASH][DEL]
115915 Default RV042-P1 deleted

```

If you have an « NO PROPOSAL CHOSEN » error, check that the « Phase 2 » encryption algorithms are the same on each side of the VPN Tunnel.

Check « Phase 1 » algorithms if you have this:

```

115911 Default (SA RV042-P1) SEND phase 1 Main Mode [SA][VID]
115911 Default RECV Informational [NOTIFY] with NO_PROPOSAL_CHOSEN error

```

## 5.6 « INVALID ID INFORMATION » error

```

122623 Default (SA RV042-P1) SEND phase 1 Main Mode [SA][VID]
122625 Default (SA RV042-P1) RECV phase 1 Main Mode [SA][VID]
122625 Default (SA RV042-P1) SEND phase 1 Main Mode [KEY][NONCE ]
122626 Default (SA RV042-P1) RECV phase 1 Main Mode [KEY][NONCE]
122626 Default (SA RV042-P1) SEND phase 1 Main Mode [ID][HASH][NOTIFY]
122626 Default (SA RV042-P1) RECV phase 1 Main Mode [ID][HASH][NOTIFY]
122626 Default phase 1 done: initiator id c3 64cd70: 195.100.205.112, responder id
c364cd72: 195.100.205.114, src: 195.100.205.112 dst: 195.100.205.114
122626 Default (SA RV042-RV042-P2) SEND phase 2 Quick Mode
[SA][KEY][ID][HASH][NONCE]
122626 Default RECV Informational [HASH][NOTIFY] with INVALID _ID_INFORMATION error
122626 Default RECV Informational [HASH][DEL]
122626 Default RV042-P1 deleted

```

If you have an « INVALID ID INFORMATION » error, check if « Phase 2 » ID (local address and network address) is correct and match what is expected by the remote endpoint.

Check also ID type ("Subnet address" and "Single address"). If network mask is not check, you are using a IPV4\_ADDR type (and not a IPV4\_SUBNET type).

## 5.7 I clicked on "Open tunnel", but nothing happens.

Read logs of each VPN tunnel endpoint. IKE requests can be dropped by firewalls. An IPSec Client uses UDP port 500 and protocol ESP (protocol 50).

## 5.8 The VPN tunnel is up but I can't ping !

If the VPN tunnel is up, but you still cannot ping the remote LAN, here are a few guidelines:

- Check Phase 2 settings: VPN Client address and Remote LAN address. Usually, VPN Client IP address should not belong to the remote LAN subnet
- Once VPN tunnel is up, packets are sent with ESP protocol. This protocol can be blocked by firewall. Check that every device between the client and the VPN server does accept ESP
- Check your VPN server logs. Packets can be dropped by one of its firewall rules.
- Check your ISP support ESP

- If you still cannot ping, follow ICMP traffic on VPN server LAN interface and on LAN computer interface (with Ethereal for example). You will have an indication that encryption works.
- Check the "default gateway" value in VPN Server LAN. A target on your remote LAN can receive pings but does not answer because there is a no "Default gateway" setting.
- You cannot access to the computers in the LAN by their name. You must specify their IP address inside the LAN.
- We recommend you to install ethereal (<http://www.ethereal.com>) on one of your target computer. You can check that your pings arrive inside the LAN.

	Doc.Ref	tgvpn_ug_RV042_en
	Doc.version	1.0 – Jan. 2006
	VPN version	3.0x

## 6 Contacts

News and updates on TheGreenBow web site : <http://www.thegreenbow.com>

Technical support by email at [support@thegreenbow.com](mailto:support@thegreenbow.com)

Sales contacts at +33 1 43 12 39 37 ou by email at [info@thegreenbow.com](mailto:info@thegreenbow.com)